



STARBUCKS BARISTA
BURR GRINDER
USER MANUAL

READ ALL INSTRUCTIONS IMPORTANT SAFEGUARDS

▲ CAUTION

When using electrical appliances, basic safety precautions must be followed, including the following:

1. Be sure you read and understand all instructions, safeguards and warnings before operating your grinder.
2. Always turn appliance OFF before plugging in or removing power cord from wall outlet.
3. This machine is not for commercial use. It was designed to process normal household quantities only. It is not suitable for continuous operation.
4. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
5. Do not leave your grinder unattended while turned ON.
6. Do not use outdoors.
7. Children should not use this machine. Keep your grinder out of the reach of children.
8. Use your Starbucks Barista™ Burr Grinder only on alternating current (AC). Be certain the machine is connected only to a power source with the voltage that is specified on the rating plate located on the underside of the appliance (120 volts).
9. Disassemble your grinder only as directed in the *Care and Cleaning* and *Troubleshooting* sections on pages 6 and 7 of this manual. If you cannot remedy a malfunction by using the *Troubleshooting* procedures on page 7 call warranty services for further assistance.
10. Do not use appliance for anything other than its intended use.
11. This appliance may be fitted with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way!

SAVE THESE INSTRUCTIONS

Warnings – **▲WARNING**

To Avoid Electrical Shock:

- Keep your grinder out of the reach of children.
- Do not immerse the appliance, plug or cord in water or any other liquid.
- Do not run water or any other liquid over the machine body.
- Do not operate your grinder with a damaged cord or plug, or if the appliance malfunctions.
- Shut off and unplug machine from the electrical outlet when not in use and before cleaning. To unplug, grasp plug and remove from the outlet – never pull on cord.
- Use only with 120-volt current.
- Do not use attachments or parts not included or approved for use with this machine as they may cause fire, electrical shock or other injury.

To Otherwise Avoid Injury:

- Do not place grinder on or near a hot gas or electric burner, or in a heated oven. Keep appliance from direct contact with steam.
- Do not use your Starbucks Barista Burr Grinder if it has been dropped or damaged.
- Moving parts can cut and crush. Never operate the grinder with the bean hopper or ground coffee container removed. Keep hands away from the grinding burrs while the machine is in use.
- Always unplug the grinder before cleaning and before following the *Troubleshooting* instructions on page 7 of this manual.

Short Cord Instructions

A short power supply cord is provided to reduce your risk of tripping over, or otherwise becoming entangled with, a longer cord. Longer extension cords are available and may be utilized if care is exercised in their use. If an extension cord is used:

- The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance (120 volts).
- The longer cord should be arranged so that it will not drape over the counter top or table top, where it may be pulled on by children or accidentally tripped over.

Factory Testing Information

To ensure that your Starbucks Barista Burr Grinder will operate to perfection once it reaches your home, the factory tests each machine before shipping it to Starbucks. Occasionally, a new machine may still contain coffee residue from this factory testing. If you find such residue on your machine, simply clean it as directed under *Before Using Your Starbucks Barista Burr Grinder For The First Time*.

NOTICE: Considerable effort has been made to ensure that this manual is free of inaccuracies and omissions. However, as we are constantly improving our coffee and product knowledge, some of the data contained herein may have been improved upon since the printing of this manual. If you have a need for an exact specification or additional clarification, please contact Warranty Services at 1-800-334-5553 in the U.S. and Canada.

Your New Starbucks Barista Burr Grinder

Making great coffee at home requires four elements: freshly roasted coffee, a burr grinder, a coffee brewer and practice.

Starbucks has worked diligently to ensure that your home brewing experience is a successful and satisfying one. Your new grinder is designed to give you years of use and enjoyment. Its burr grinding mechanism allows you to pinpoint the right grind setting for your brewing method, from espresso to coffee press.


The key to making great coffee at home is to experiment and enjoy. If we can be of any help, please give us a call at the number below.

STARBUCKS COFFEE COMPANY

In the U.S. and Canada, call 1-800-334-5553,
or visit us on the Web at
www.starbucks.com

Description of Parts + Illustration

- A Bean Hopper Lid
- B Bean Hopper
- C Grind Setting Points
- D Ground Coffee Container
- E Power Dial
- F Power Cord

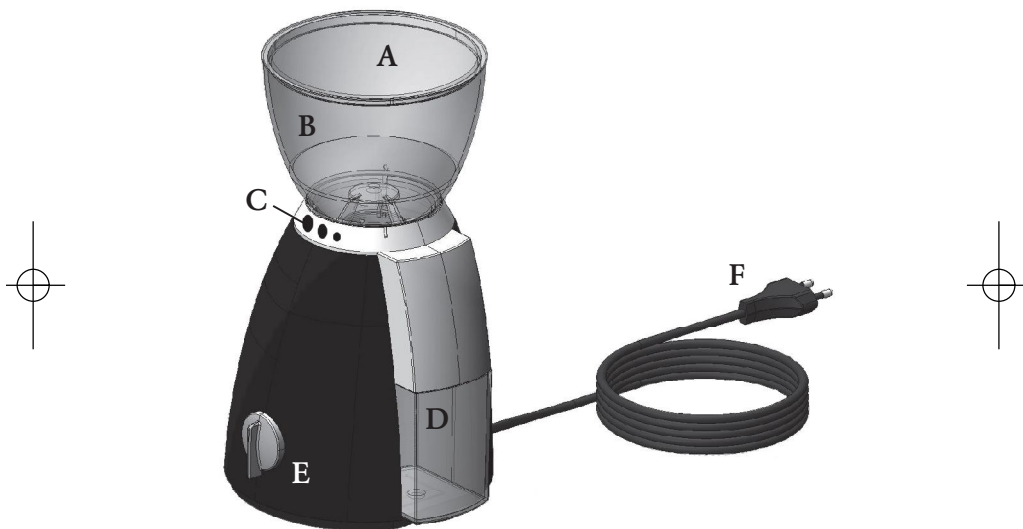

Before Using Your Starbucks Barista Burr Grinder For the First Time

- Read all *Important Safeguards* and *Warnings* found in this manual.
- Read all of the following instructions.
- Wash all removable parts of the machine with warm water. Removable parts are letters A, B and D in your *Description of Parts* list. When parts are completely dry, replace them onto the machine.

Setting Up and Using Your Starbucks Barista Burr Grinder

1. Place the grinder on a level surface. Unreel the needed length of cord.
2. Rotate bean hopper until setting indicator is pointing at the desired grind size. Dots indicate grind size. All of the settings are available for you to use to meet your specific grind-size needs.



is for finest grind setting (pump espresso machines).



is for medium grind setting (drip coffee machines).



is for coarsest grind setting (coffee presses).

3. Remove the bean hopper lid. Fill bean hopper with the quantity of whole bean coffee to be ground. Replace the bean hopper lid.
4. Plug in the machine.

Turning ON the Grinder

The grinder is equipped with a power dial. The grinder grinds for approximately 6 seconds per number. The quantity of ground coffee you need depends on the type of bean, your grind-size needs and your personal taste.

1. Turn the power dial to the desired grinding time. The grinder grinds for approximately 6 seconds per number. The grinder automatically turns off once the preset time has elapsed. If you want to turn off the grinder before the preset time has elapsed, turn the knob back to the left until the grinder turns off.
2. Unplug the machine. Remove ground coffee container and make your coffee.
3. Do NOT allow ground coffee container to overfill. Overfilling the ground coffee container may result in clogging your burrs and damaging your machine. Remove and clean your ground coffee container regularly.
4. Never turn the bean hopper while grinding. Doing so may permanently damage the machine. Always wait for the grinder to stop grinding before moving to a new grind setting.

Care and Cleaning

To ensure optimal performance, clean your Starbucks Barista Burr Grinder regularly. The more the grinder is used, the more often cleaning should be done. We recommend You fully clean your grinder either once a month or once every five pounds of coffee, whichever comes first.

To clean the ground coffee container:

1. Unplug the machine.
2. Remove the ground coffee container. Remove all of the ground coffee from the container.
3. Wash the ground coffee container in warm soapy water. Do not wash in the dishwasher. Thoroughly rinse and air dry the ground coffee container.
4. Replace the ground coffee container in the machine housing once it's completely dry.

To clean the bean hopper:

1. Unplug the machine.
2. Remove all beans from the bean hopper.
3. Rotate the bean hopper until the setting indicator is pointing at the line to the right of the largest setting dot. This is the bean hopper release point. Lift the bean hopper up, off the housing of the machine.
4. Wash the bean hopper in warm soapy water. Do not wash in the dishwasher. Thoroughly rinse and dry the bean hopper.
5. Replace the bean hopper on the machine housing once it's completely dry.

To clean the grinding burrs:

1. Unplug the machine.
2. Remove all beans from the bean hopper.
3. Rotate the bean hopper until the setting indicator is pointing at the bean hopper release point. Lift the bean hopper up, off the housing of the machine.
4. Reach down into the top opening created by removal of the bean hopper. Lift the top burr out of the machine.
5. Use a soft bristle brush or dry towel to brush off and remove any ground coffee from the top and bottom burrs. A vacuum cleaner with a hose attachment may be used to vacuum out any remaining ground coffee from the burr areas.
6. Replace the top burr into the machine.
7. Replace the bean hopper.

WARNING: Careful, don't wet the burrs while cleaning.

All cleaning of the burrs must be done dry.

Troubleshooting

Problems:

Ground coffee sprays from the ground coffee container.

**Beans are not feeding into the grinder burrs.
(Grinder is making a high-pitched noise.)**

**Grinder is not grinding.
(Grinder is making a low-pitched sound, as if the motor is laboring.)**

Grinder motor does not engage or turn on.

Solutions:

- Some grind spray is normal. Grind spray is primarily caused by static electricity.

- The shape of the bean will naturally put the beans into a locked pattern form. Turn OFF the power dial and unplug the machine. Stir the beans with a spoon. This will break the pattern and allow the beans to feed into the burr area.
- The bean hopper is dirty. Follow cleaning instructions located in the *Care and Cleaning* section of instruction manual.

- The burrs are clogged. Follow cleaning instructions located in the *Care and Cleaning* section of instruction manual.

- The burrs are clogged. Follow cleaning instructions located in the *Care and Cleaning* section of instruction manual.

If you still have difficulties, please call Warranty Services at 1-800-334-5553 in the U.S. and Canada for more in-depth cleaning assistance, or visit us on the Web at www.starbucks.com