

## **Caffe' Charisma** **Grinder Cleaning Instructions**

**\*\*Before attempting this procedure make sure the machine is unplugged and all the beans have been removed from the bean hopper. This can be done with a vacuum cleaner.\*\***

**Step 1:** Remove the 3 screws in the Bean Hopper and lift the Bean Hopper off of the Machine.



**Step 2:** Remove the Rubber Gasket on top of the Grinder. Once removed, rotate the outer ring counter-clockwise until the red lines are opposite from one another. The outer ring should not be able to rotate any further.

**\*\*Do not remove the center screw or the white worm gear.\*\***

**Step 3:** Lift out the upper burr by holding onto one of the fins on top. You will have to move the doser adjustment lever to the side slightly to get the upper burr past it.




Doser Adjustment Lever.

---

-Continued on next page-

Step 4: At this point you need to clean the grinder chamber and burrs. **DO NOT USE WATER!** Only use the brush provided and a vacuum. Make sure you clean the upper burr that you have removed. The area needs to be completely free of grinds.

Step 5: Place the upper burr back into the grinder chamber the same way it came out. The red lines should still be 180 degrees opposite from one another.

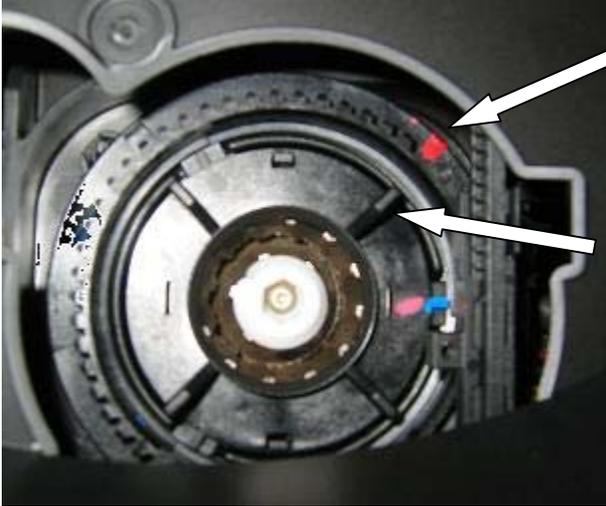

Step 6: Rotate the outer ring Clockwise until the red line is aligned as shown below with the fin on top of the burr.


Step 7: The doser adjustment must be moved towards the back of the machine until it stops.



Step 8: Replace the rubber gasket onto the top of the upper burr.

---

-Continued on next page-

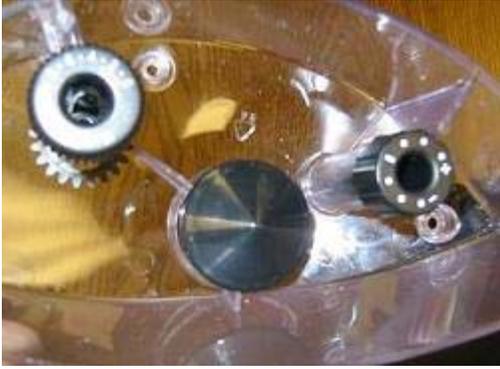

Step 9: Before placing the Bean Hopper back onto the machine you must make sure the adjuster knobs are in the correct positions. Put the grinder adjustment knob to 6 and the doser knob to the plus ( + ) symbol.

Step 10: When placing the bean hopper back onto the machine, you may need to slightly rotate each nob to assist in the alignment of the gears. Once fully seated, hold the bean hopper in place and rotate each knob through its full range to verify the correct functioning of the knobs. Bring the Grinder knob back to 6.

Step 11: Replace the three screws in the bean hopper and fill with beans.

The machine is now ready to be used again. Because the entire grinder chamber has been cleared it may take up to 3 or 4 grinding cycles before the machine will brew the first cup of coffee again, similar to when the machine was initially set up.

For any questions please call 800-933-7876 and ask to speak with Customer Service.

---