



Saeco Fully Automatic Magic, Royal & Roma  
Model Espresso  
GRINDER CLEANING INSTRUCTIONS


Make sure the machine is turned off.  
Remove all beans from the bean hopper. Vacuum  
out all beans that cannot be scooped out.  
Remove two philips screws from the container.

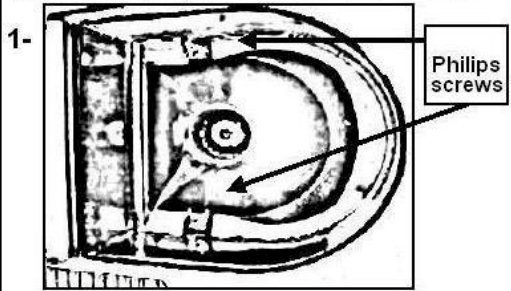


Remove the bean hopper.  
Vacuum any beans remaining

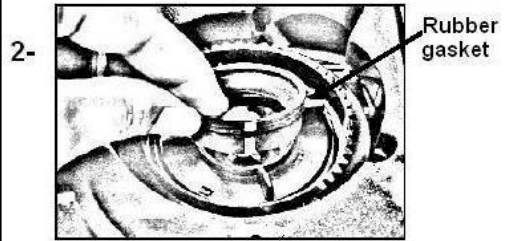


Remove the rubber gasket. Rubber gasket  
may come out attached to the container.

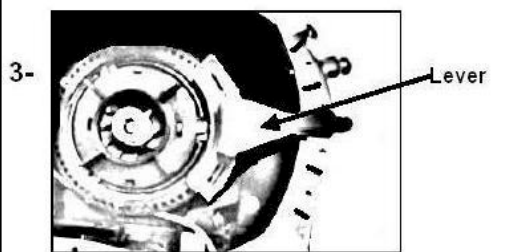

Remove the grind adjustment lever.  
Place index fingers under the flange  
on each side and lift straight up.

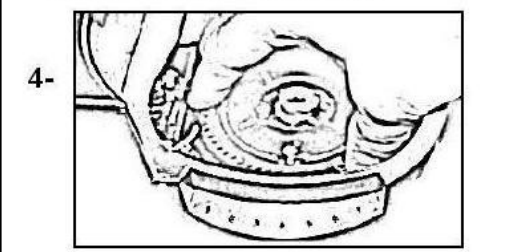


Turn the outer ring with holes around its edge  
& at the same time pull the center piece up by  
its fins, until it can be pulled out.

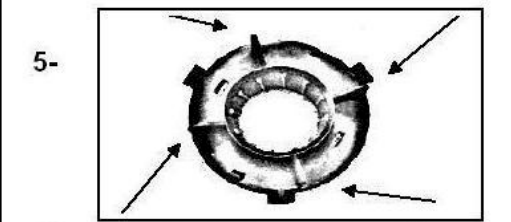


This center piece is the larger burr with arrows  
pointing to its fins. Clean this part with brush.  
Do not use water at any stage of cleaning.




Vacuum the grinding chamber and brush clean

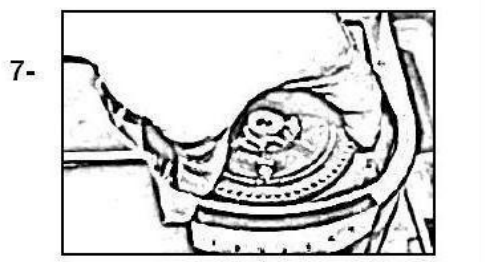


Replace the center piece to match the grooves  
with its three ears. Turn the outer ring  
clock-wise until it stops turning.

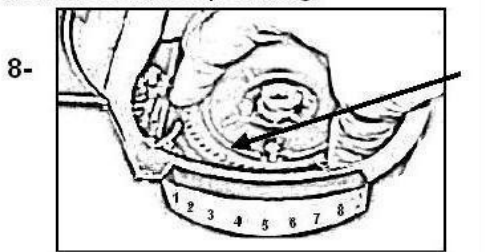


Now return the outer ring counter-clockwise to  
13-clicks and stop.

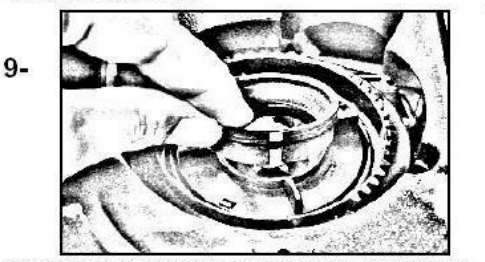

Replace the rubber gasket on the cenetr piece.

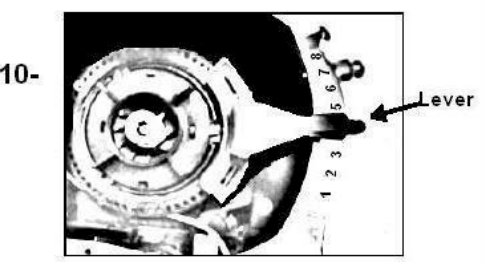

Replace the grind adjustment lever. Drop the flange  
with its lever at position #4. Using the thumb on  
either side of the flange and index fingers below  
the outer ring edge, press the flange to lock it.

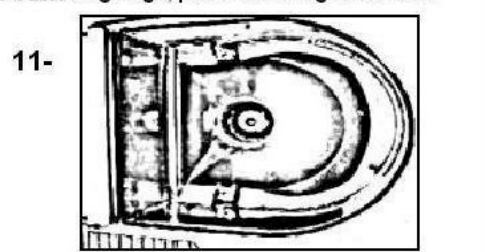

Replace the bean container and fasten the screws.